

Eliminate climbing in and out of the truck to reposition, and remove the need for an extra person. The Stop Assist will help you stop right on the target each and every time. Use with grain handling equipment or anywhere you have to align loading and unloading equipment on a regular basis.





- Operation is simple. Position the main unit to the side of the truck or trailer on initial use. Then attach the reflector/indicator to the side of truck. On all subsequent trips the Stop Assist will alert you both visually and audibly so you can stop right on target, every time.
 - Use the Stop Assist on grain handling equipment, feed trucks and trailers, railcars, cement trucks and on construction sites or anywhere you have to align equipment on a regular basis
 - Equip multiple vehicles with reflectors for an even quicker and smoother operation.



Learn more

1-888-SUDENGA | 1-712-475-3301 | Fax: 1-712-475-3320 PO Box 8, 2002 Kingbird Ave., George, IA 51237 USA sales@sudenga.com | www.sudenga.com



